




Parallel vs Series

Series wiring - low voltage higher current. Most often used for British and USA clocks

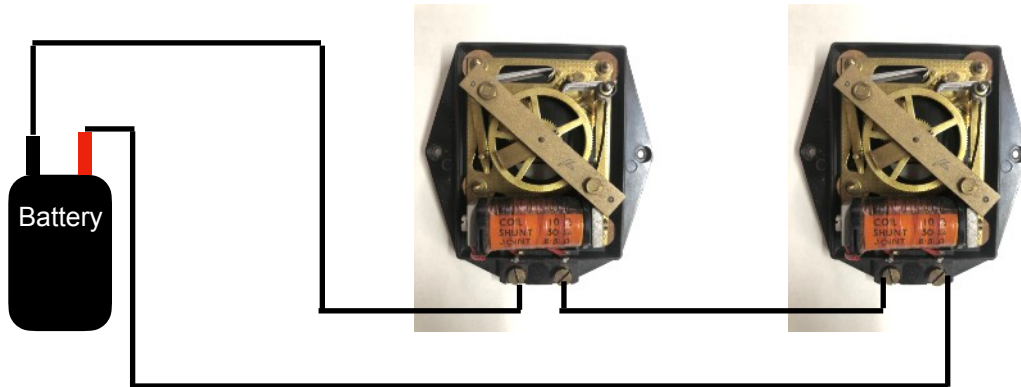

Parallel wiring - higher voltage and lower current. Most often used for European and modern clocks

